

# QUICK START GUIDE

Choose a noisy environment to get started.

**Put some background music on!**



QuietOn

# 1.

To hear the noise cancelling switch on, you need to be fast.



Timer starts when removing earbud from the case.

## 2.

Earbuds need to be airtightly  
in ear to work well.



Hold earbud like this.



Push it firmly in.




Rotate it backwards

Push more if needed.  
It feels airtight and is not  
visible from the front.



## Advanced Experience

Ensure that right and left earbuds are in correct ears.

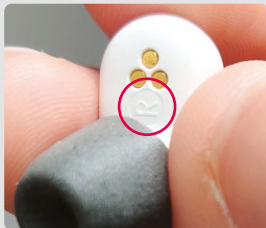

Try changing the the correct size foam tip. Do not use fingernail when removing the tip.



Try inserting both earbuds at the same time in 15 seconds.


Reset the timer by returning the earbuds to the case.



**If you have any questions  
we are here to help you!**

[www.quieton.com/support](http://www.quieton.com/support)

**QuietOn**

 quieton

 quieton

 quietonearbuds

 QuietOnEarbuds

 [www.quieton.com](http://www.quieton.com)